


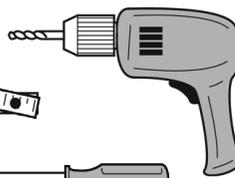


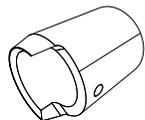



40018749

Instructions de montage originales 25/06/21 PVA

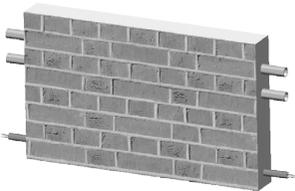

Les cotes **H** et **L** sont à vérifier sur l'appareil **avant** de commencer la procédure de pose.

L	H
517	1427
517	1723
617	1871
717	2019

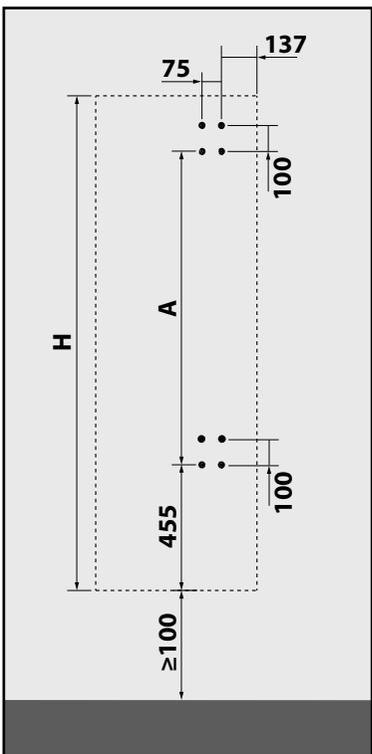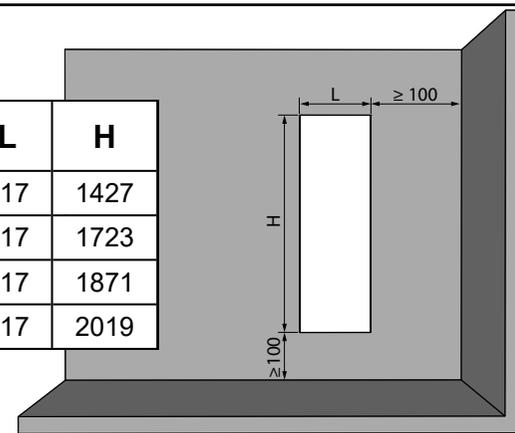

H	A	H	A
1427	700	1871	1200
1723	1000	2019	1200

